

CHECKING AND REPLACING FOOT PEDAL

MICRO MILLER | MINI CLEANER | MINI CLEANER +C | MINI MILLER | MINI MILLER +C



This Service Centre Instruction describes how to check and replace the Foot Pedal on a Picote Micro Miller, Mini Cleaner, Mini Cleaner +C, Mini Miller and Mini Miller +C.

THIS DOCUMENT IS INTENDED FOR PICOTE SERVICE CENTRES ONLY

Confidentiality Notice: This document is confidential and contains proprietary information and intellectual property of Picote Solutions Oy Ltd. Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of Picote Solutions Oy Ltd. **Please be aware that any unauthorised disclosure, copying, distribution or use of this document and the information contained therein is strictly prohibited.**

 WARNING

Before performing any maintenance always check that the machine is fully turned off and unplugged. Only qualified electricians or an authorised Picote Service Center may undertake this work.

Only use Picote Solutions accessories and attachments with the machine described in this Technical Instruction Guide. The use of other accessories or attachments could present a risk of injury or death. The accessories or attachments should only be used in the proper and intended manner. Always follow Picote Solutions' instructions.

PLEASE NOTE: Picote Solutions accepts no liability for any failures or accidents caused by repair attempts made by non-qualified personnel. Any alterations other than those prescribed in these instructions are prohibited. Always wear appropriate PPE.

**DANGER**

Risk of serious injury
from electric shock

REPLACEMENT PARTS IF REQUIRED

PRODUCT NUMBER	PART NAME
9590001090	Red Foot Pedal for all Millers

POSSIBLE TOOLS REQUIRED


Multimeter
PH screw driver
24mm Wrench

CHECKING OPERATION

**1. UNPLUG THE MACHINE.
UNSCREW &
OPEN LID OF
THE CONTROL
BOX**



**2. CHECK CONTINUITY
BETWEEN A1 & L1. THERE
SHOULD BE CONTINUITY WHEN
PEDAL IS PRESSED**

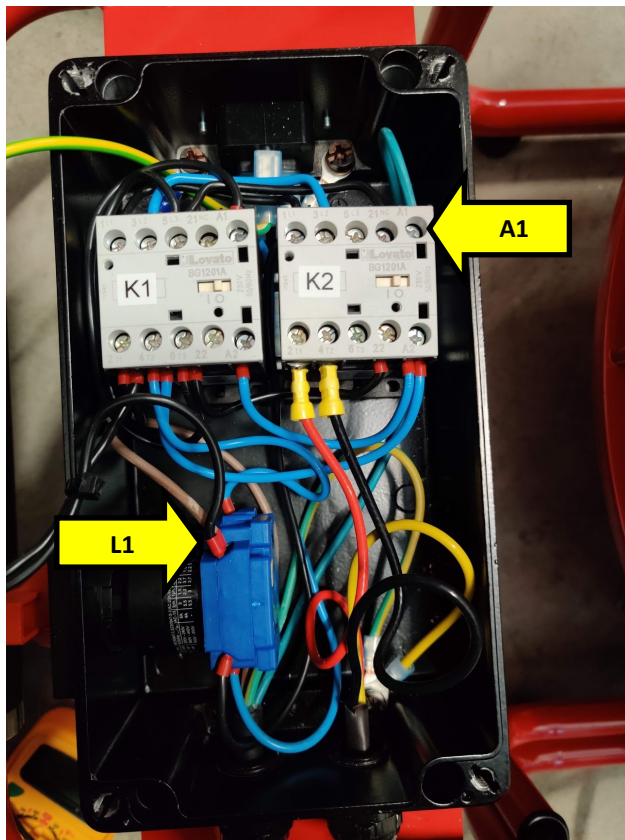

**3. MOVE FOOT PEDAL AND ITS
CABLE WHILE TESTING TO FIND
POSSIBLE CONNECTION PROBLEMS**


REPLACE THE PEDAL IF:

- IT STICKS WHEN PRESSED
- IT DOES NOT FUNCTION WHEN PRESSED
- THERE ARE SIGNS OF DAMAGE


REPLACING FOOT PEDAL

1. UNPLUG MACHINE FROM POWER SOURCE AND TURN ON/OFF SWITCH TO OFF POSITION

2. REMOVE FOOT PEDAL'S BLUE, BROWN AND GREEN/YELLOW WIRE

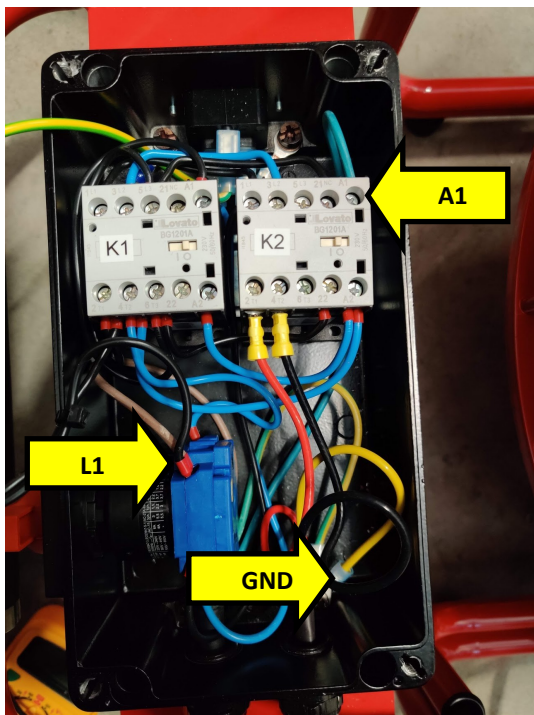

3. UNSCREW THE GLAND'S COVER. PULL THE WIRES THROUGH THE GLAND.

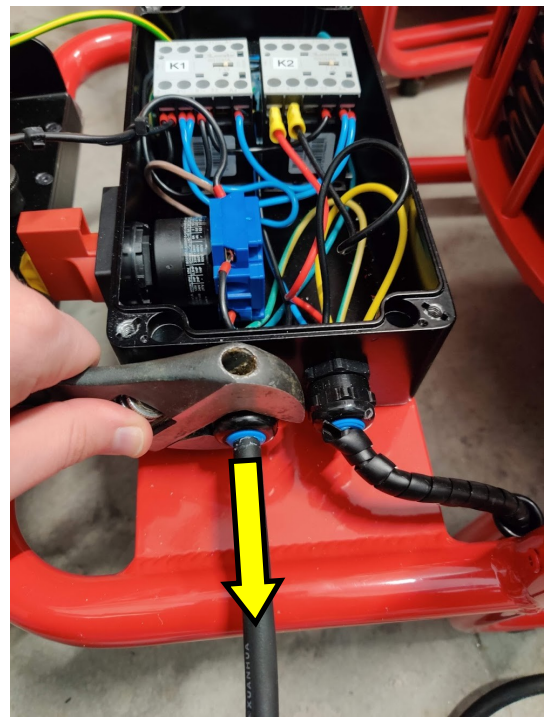

4. REASSEMBLE IN REVERSE ORDER. PERFORM EARTHING TESTS AS PER LOCAL REGULATIONS

